

SECTION **SB**  
SEAT BELTS

A  
B  
C  
D  
E  
F  
G  
SB  
I  
J  
K  
L  
M

CONTENTS

<b>PRECAUTIONS</b> .....	<b>2</b>	Cab .....	<b>9</b>
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	2	REMOVAL OF SEAT BELT RETRACTOR - OUTBOARD .....	10
Precautions for Seat Belt Service .....	2	INSTALLATION OF SEAT BELT RETRACTOR - OUTBOARD .....	10
AFTER A COLLISION .....	2	REMOVAL OF SEAT BELT RETRACTOR - CENTER .....	10
<b>SEAT BELTS</b> .....	<b>3</b>	INSTALLATION OF SEAT BELT RETRACTOR - CENTER .....	10
Removal and Installation of Front Seat Belt - King Cab .....	3	REMOVAL OF SEAT BELT BUCKLE .....	10
REMOVAL OF SEAT BELT RETRACTOR .....	4	INSTALLATION OF SEAT BELT BUCKLE .....	10
INSTALLATION OF SEAT BELT RETRACTOR.....	4	Seat Belt Inspection .....	11
REMOVAL OF SEAT BELT BUCKLE .....	4	AFTER A COLLISION .....	11
INSTALLATION OF SEAT BELT BUCKLE .....	4	PRELIMINARY CHECKS .....	11
Removal and Installation of Front Seat Belt - Double Cab .....	5	SEAT BELT RETRACTOR ON-VEHICLE CHECK .....	12
REMOVAL OF SEAT BELT RETRACTOR .....	6	SEAT BELT RETRACTOR OFF-VEHICLE CHECK .....	12
INSTALLATION OF SEAT BELT RETRACTOR.....	6	<b>SEAT BELT WARNING SYSTEM</b> .....	<b>14</b>
REMOVAL OF SEAT BELT BUCKLE .....	6	Description .....	14
INSTALLATION OF SEAT BELT BUCKLE .....	6	<b>LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM</b> .....	<b>15</b>
Removal and Installation of Rear Seat Belt - King Cab .....	7	Removal and Installation - Double Cab .....	15
REMOVAL .....	8	<b>TOP TETHER STRAP CHILD RESTRAINT</b> .....	<b>16</b>
INSTALLATION .....	8	Removal and Installation - Double Cab .....	16
REMOVAL OF SEAT BELT BUCKLE .....	8		
INSTALLATION OF SEAT BELT BUCKLE .....	8		
Removal and Installation of Rear Seat Belt - Double Cab .....			

# PRECAUTIONS

## PRECAUTIONS

PFP:00001

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EHS0026D

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Precautions for Seat Belt Service

EHS00265

#### **CAUTION:**

- Before removing the seat belt pre-tensioner assembly, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Do not use electrical test equipment for seat belt pre-tensioner connector.
- After replacing or reinstalling seat belt pre-tensioner assembly, or reconnecting seat belt pre-tensioner assembly connector, ensure entire SRS operates properly. Refer to [SRS-18, "SRS Operation Check"](#) .
- Deploy seat belt pre-tensioner assembly before disposing. Refer to [SRS-49, "DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER"](#) .
- Do not disassemble buckle or seat belt assembly.
- Replace anchor bolts if they are deformed or worn out.
- Never oil tongue and buckle.
- If any component of seat belt assembly is questionable, do not repair. Replace the whole seat belt assembly.
- If webbing is cut, frayed, or damaged, replace seat belt assembly.
- When replacing seat belt assembly, use a genuine NISSAN seat belt assembly.

### AFTER A COLLISION

#### **WARNING:**

- Inspect all seat belt assemblies including retractors and attaching hardware after any collision.
- NISSAN recommends that all seat belt assemblies in use during a collision be replaced unless the collision was minor and the belts show no damage and continue to operate properly. Failure to do so could result in serious personal injury in an accident. Seat belt assemblies not in use during a collision should also be replaced if either damage or improper operation is noted. Seat belt pre-tensioner should be replaced even if the seat belts are not in use during a frontal collision in which the air bags are deployed.

Replace any seat belt assembly (including anchor bolts) if:

- The seat belt was in use at the time of a collision (except for minor collisions and the belts, retractors and buckles show no damage and continue to operate properly).
- The seat belt was damaged in an accident. (i.e., torn webbing, bent retractor or guide, etc.)
- The seat belt attaching point was damaged in an accident. Inspect the seat belt attaching area for damage or distortion and repair as necessary before installing a new seat belt assembly.
- Anchor bolts are deformed or worn out.
- The seat belt pre-tensioner should be replaced even if the seat belts are not in use during the collision in which the air bags are deployed.

# SEAT BELTS


## SEAT BELTS

PFP:86884

### Removal and Installation of Front Seat Belt - King Cab

EHS00266

SEC. 868

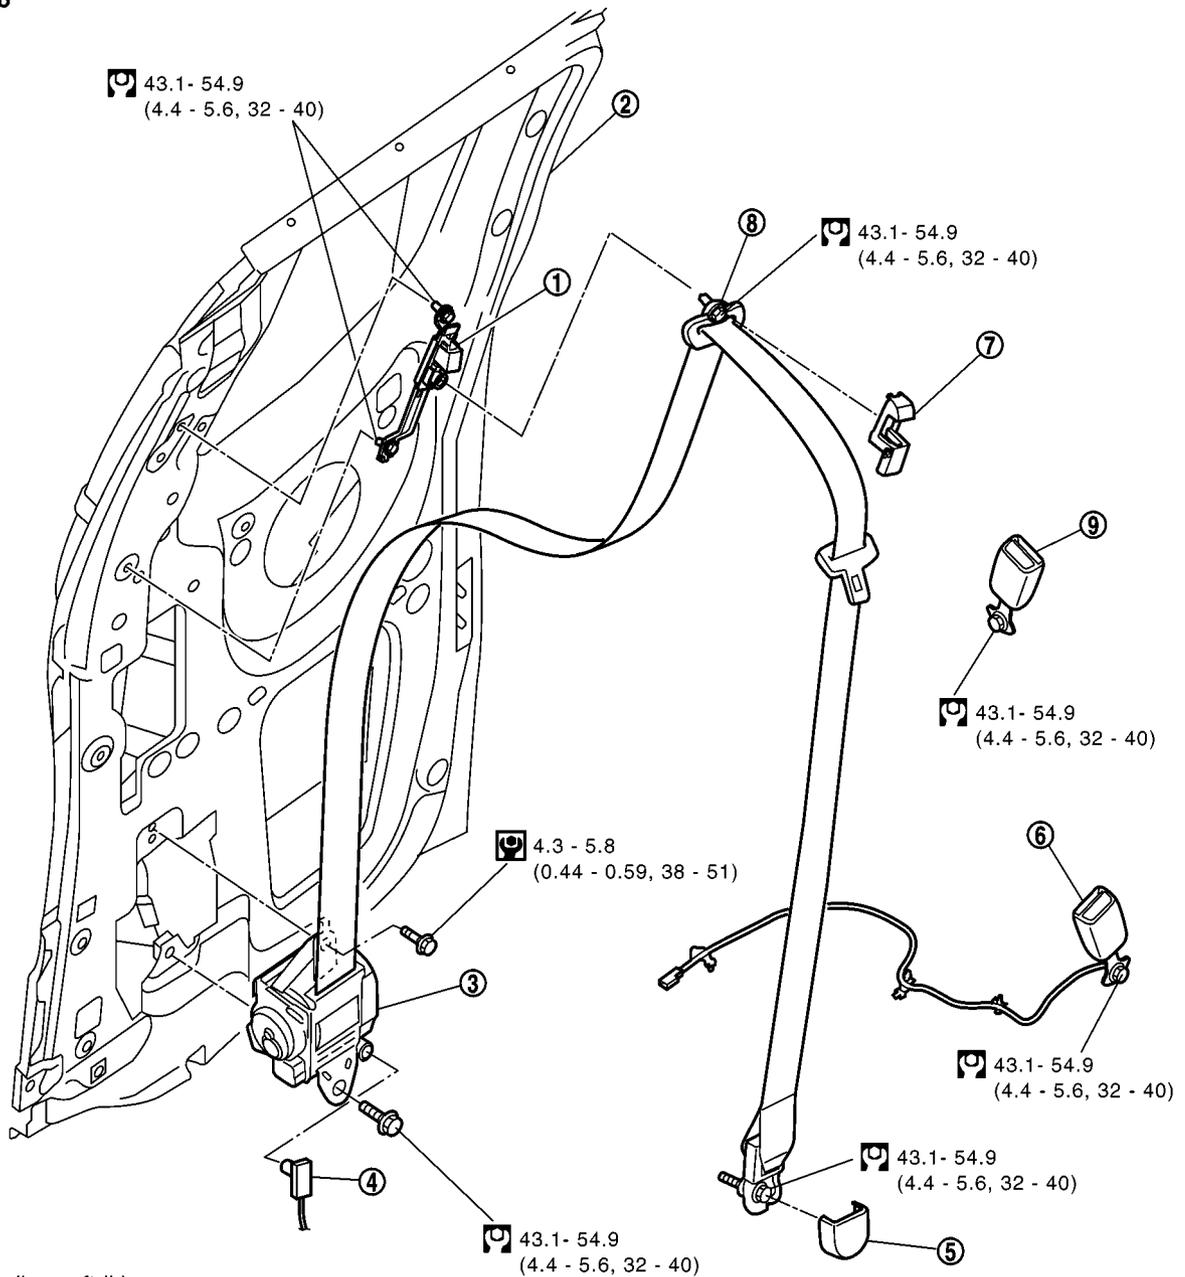

: N•m (kg-m, ft-lb)

: N•m (kg-m, in-lb)

- |                                      |                  |   |
|--------------------------------------|------------------|---|
| 1. Seat belt height adjuster         | 2. Rear door     | 3. Seat belt retractor and belt assembly RH |
| 4. Seat belt pre-tensioner connector | 5. Anchor cover  | 6. Seat belt buckle driver                  |
| 7. D-ring anchor bolt cover          | 8. D-ring anchor | 9. Seat belt buckle passenger               |

MHIB9016E

# SEAT BELTS


## REMOVAL OF SEAT BELT RETRACTOR

### CAUTION:

- Before servicing SRS, turn the ignition switch off, disconnect both battery cables and wait at least 3 minutes.
1. Remove the rear door finishers. Refer to [EI-30, "DOOR FINISHER"](#).
  2. Remove the seat belt retractor and belt bolts and assembly.
    - On RH side, disconnect the seat belt tension sensor.
  3. Disconnect the seat belt pre-tensioner electrical connector.

### CAUTION:

- For installing/removing seat belt pre-tensioner connector, insert a thin screwdriver wrapped in tape into the notch, lift the lock and remove the connector.
- Install the connector with the lock raised, and push the lock into the connector.

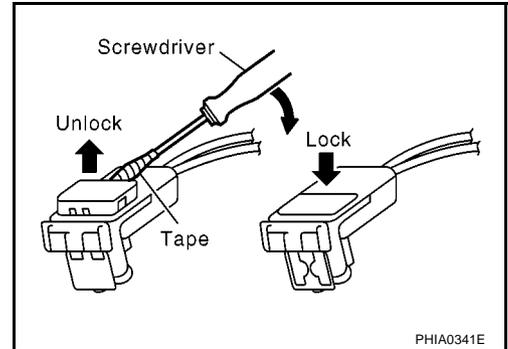


## INSTALLATION OF SEAT BELT RETRACTOR

Installation is in the reverse order of removal.

- Install the seat belt retractor and belt assembly upper bolt first.
- Ensure that seat belt height adjuster is locked in the lowest position during installation.

## REMOVAL OF SEAT BELT BUCKLE

1. Remove the front seat. Refer to [SE-20, "FRONT SEAT"](#).
2. Remove screw and seat cushion inner finisher.
3. Remove the anchor bolt and seat belt buckle.
4. Disconnect the buckle switch connector from the seat connector.

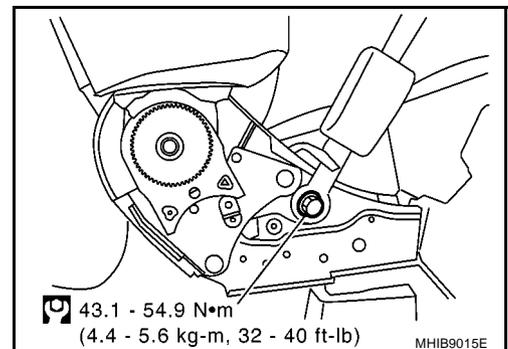

## INSTALLATION OF SEAT BELT BUCKLE


Installation is in the reverse order of removal.

# SEAT BELTS

## Removal and Installation of Front Seat Belt - Double Cab

EHS00267

SEC. 868

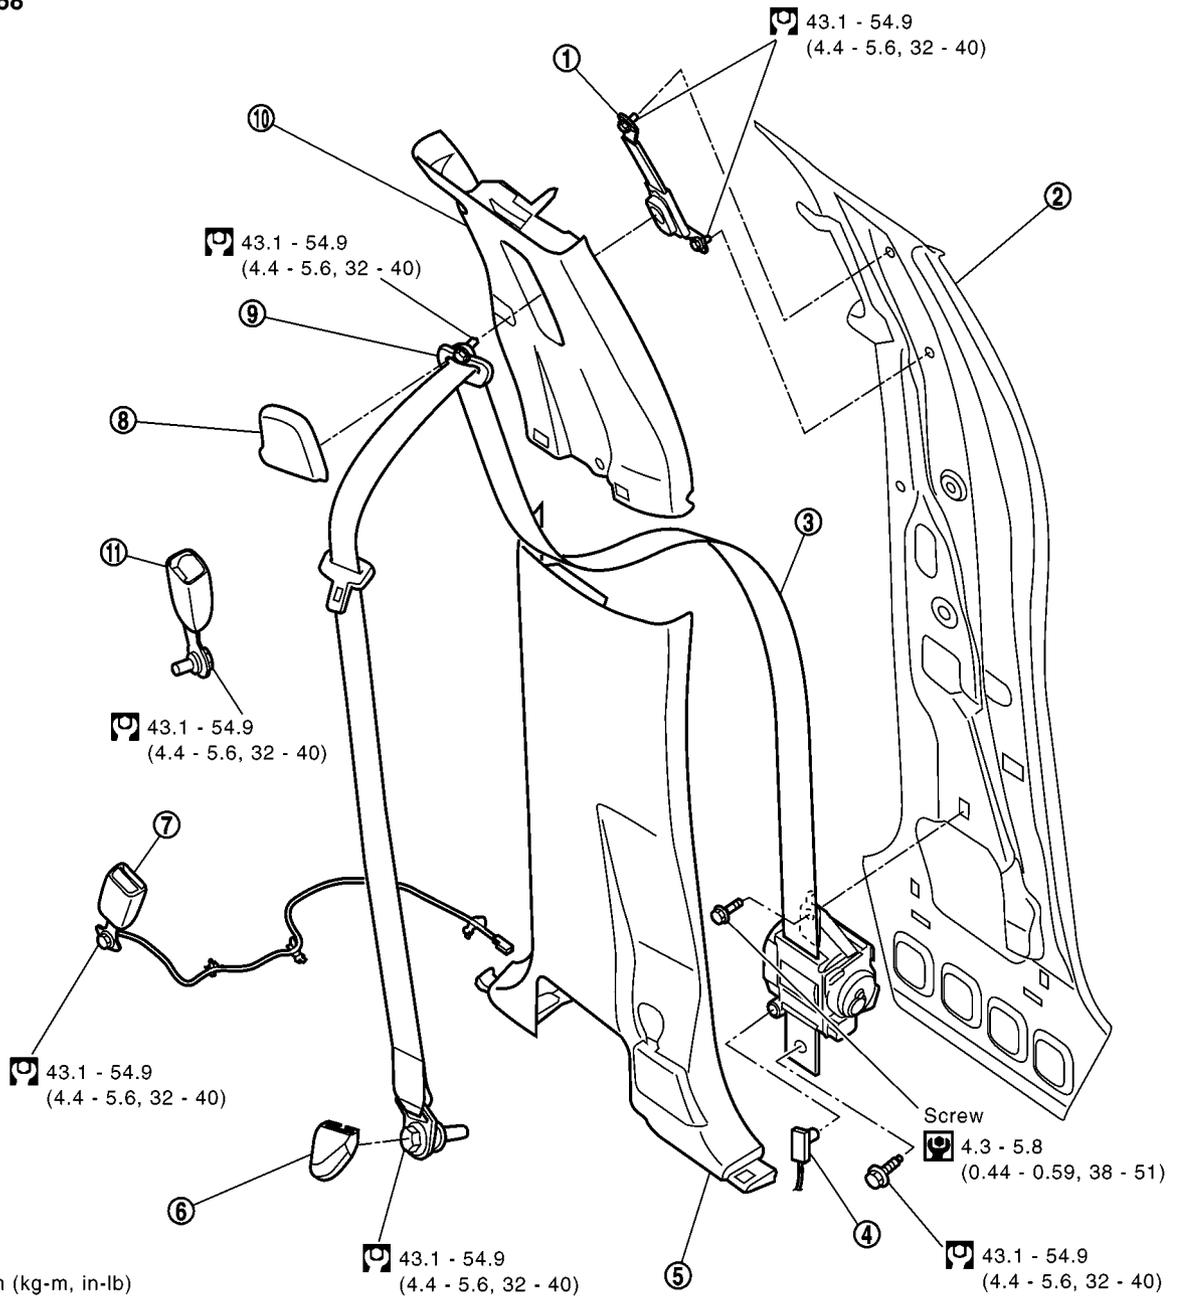

MHIB9021E

- |                                      |                                 |   |
|--------------------------------------|---------------------------------|---|
| 1. Seat belt height adjuster         | 2. Center pillar                | 3. Seat belt retractor and belt assembly LH |
| 4. Seat belt pre-tensioner connector | 5. Center pillar lower finisher | 6. Anchor cover                             |
| 7. Seat belt buckle driver           | 8. D-ring anchor bolt cover     | 9. D-ring anchor                            |
| 10. Center pillar upper finisher     | 11. Seat belt buckle passenger  |   |

# SEAT BELTS


## REMOVAL OF SEAT BELT RETRACTOR

### CAUTION:

- Before servicing SRS, turn the ignition switch off, disconnect both battery cables and wait at least 3 minutes.
1. Remove the center pillar upper/lower finishers. Refer to [EI-33, "BODY SIDE TRIM"](#) .
  2. Remove the seat belt retractor and belt bolts and assembly.
    - On RH side, disconnect the seat belt tension sensor.
  3. Disconnect the seat belt pre-tensioner electrical connector.

### CAUTION:

- For installing/removing seat belt pre-tensioner connector, insert a thin screwdriver wrapped in tape into the notch, lift the lock and remove the connector.
- Install the connector with the lock raised, and push the lock into the connector.

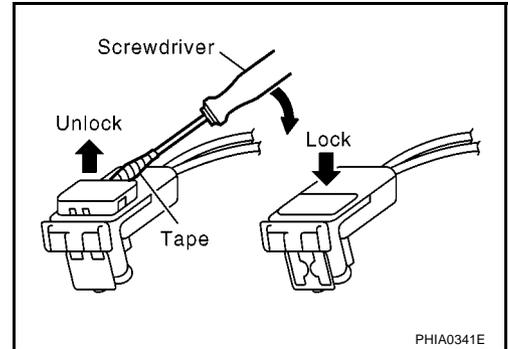


## INSTALLATION OF SEAT BELT RETRACTOR

Installation is in the reverse order of removal.

- Install the seat belt retractor and belt assembly upper bolt first.
- Ensure that seat belt height adjuster is locked in the lowest position during installation.

## REMOVAL OF SEAT BELT BUCKLE

1. Remove the front seat. Refer to [SE-20, "FRONT SEAT"](#) .
2. Remove screw and seat cushion inner finisher.
3. Remove the anchor bolt and seat belt buckle.
4. Disconnect the buckle switch connector from the seat connector.

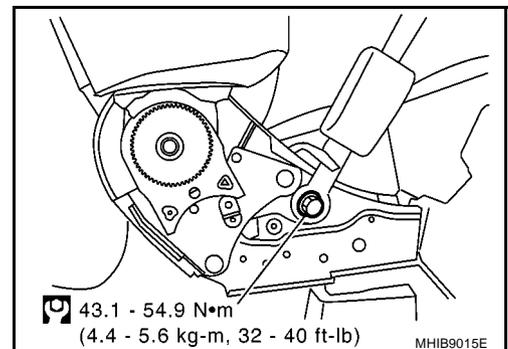

## INSTALLATION OF SEAT BELT BUCKLE


Installation is in the reverse order of removal.

# SEAT BELTS

## Removal and Installation of Rear Seat Belt - King Cab

EHS00268

SEC. 869

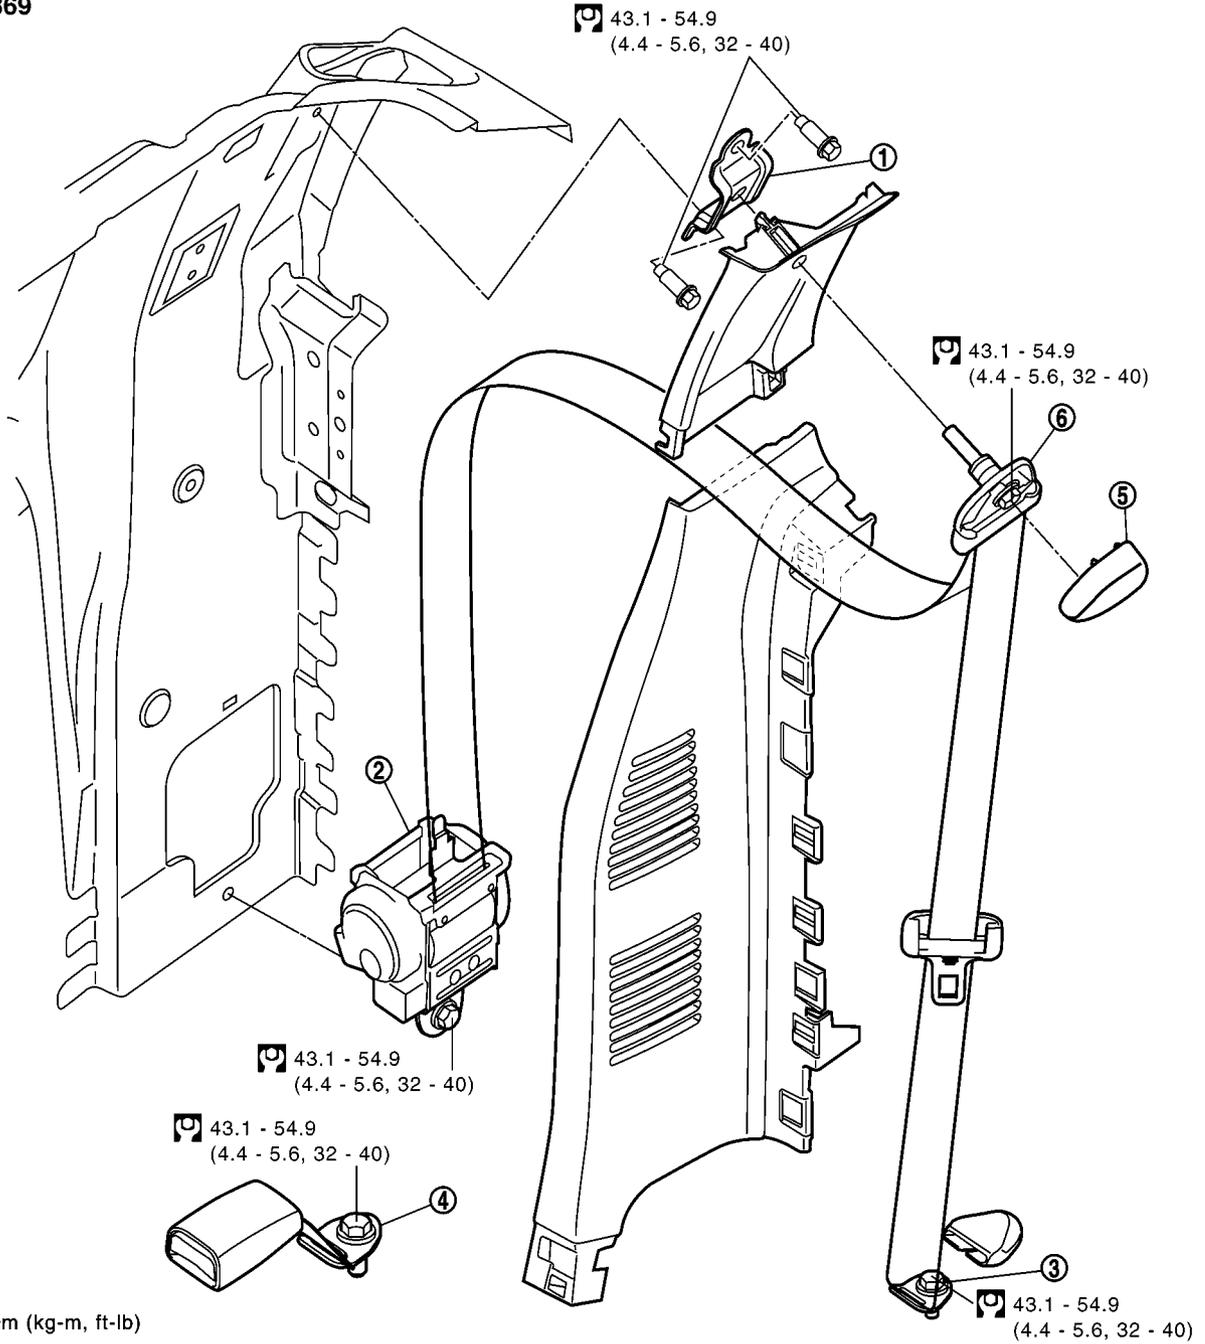

A  
B  
C  
D  
E  
F  
G  
SB  
I  
J  
K  
L  
M

: N·m (kg-m, ft-lb)

- |                      |  |                           |
|----------------------|--|---------------------------|
| 1. Seat belt bracket | 2. Seat belt retractor and belt assembly | 3. Seat belt lower anchor |
| 4. Seat belt buckle  | 5. D-ring anchor bolt cover              | 6. D-ring anchor          |

MHIB9017E

# SEAT BELTS

## REMOVAL


1. Remove seat belt lower anchor cover and bolt.
2. Remove the D-ring anchor bolt cover and D-ring anchor bolt.
3. Remove the upper and lower rear pillar finishers. Refer to [EI-33, "BODY SIDE TRIM"](#) .
4. Remove seat belt retractor and belt assembly bolt.

## INSTALLATION

Installation is in the reverse order of removal.

## REMOVAL OF SEAT BELT BUCKLE

1. Position the rear seat cushion in the folded up position.
2. Remove the anchor bolt and seat belt buckle.

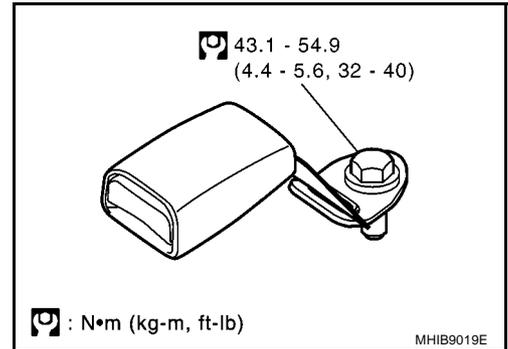

## INSTALLATION OF SEAT BELT BUCKLE

Installation is in the reverse order of removal.



# SEAT BELTS

## REMOVAL OF SEAT BELT RETRACTOR - OUTBOARD

1. Remove seat belt lower anchor cover and bolt.
2. Remove the D-ring anchor bolt cover and D-ring anchor bolt.
3. Remove the upper and lower rear pillar finishers. Refer to [EI-33, "BODY SIDE TRIM"](#) .
4. Remove seat belt retractor and belt bolt and assembly from vehicle.

## INSTALLATION OF SEAT BELT RETRACTOR - OUTBOARD

Installation is in the reverse order of removal.

## REMOVAL OF SEAT BELT RETRACTOR - CENTER


1. Position the rear seat cushion in the folded up position.
2. Remove seat belt lower anchor cover and bolt.
3. Remove rear panel upper finisher. Refer to [EI-33, "BODY SIDE TRIM"](#) .
4. Remove center belt shoulder guide bolts.
5. Remove seat belt retractor and belt bolt and assembly from vehicle.

## INSTALLATION OF SEAT BELT RETRACTOR - CENTER

Installation is in the reverse order of removal.

## REMOVAL OF SEAT BELT BUCKLE

1. Position rear seat cushion in the folded up position.
2. Remove the anchor bolt and seat belt buckle.

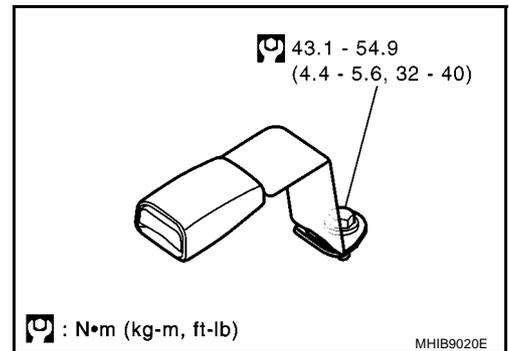

## INSTALLATION OF SEAT BELT BUCKLE

Installation is in the reverse order of removal.

# SEAT BELTS

EHS0026A

## Seat Belt Inspection AFTER A COLLISION

### WARNING:

Inspect all seat belt assemblies including retractors and attaching hardware after any collision. NISSAN recommends that all seat belt assemblies in use during a collision be replaced unless the collision was minor and the belts show no damage and continue to operate properly. Failure to do so could result in serious personal injury in an accident. Seat belt assemblies not in use during a collision should also be replaced if either damage or improper operation is noted. Seat belt pre-tensioners should be replaced even if the seat belts are not in use during a frontal collision in which the air bags are deployed.

Replace any seat belt assembly (including anchor bolts) if:

- The seat belt was in use at the time of a collision (except for minor collisions and the belts, retractors and buckles show no damage and continue to operate properly).
- The seat belt was damaged in an accident. (i.e. torn webbing, bent retractor or guide).
- The seat belt attaching point was damaged in an accident. Inspect the seat belt attaching area for damage or distortion and repair as necessary before installing a new seat belt assembly.
- Anchor bolts are deformed or worn out.
- The seat belt pre-tensioner should be replaced even if the seat belts are not in use during the collision in which the air bags are deployed.

## PRELIMINARY CHECKS

1. Check the seat belt warning lamp for proper operation as follows:
  - a. Switch ignition ON. The seat belt warning lamp should illuminate.
  - b. Fasten driver's seat belt. The seat belt warning lamp should go out. If warning lamp remains illuminated, Refer to [DI-28, "WARNING LAMPS"](#) .
2. If the air bag warning lamp is blinking, conduct self-diagnosis using CONSULT-II, and air bag warning lamp. Refer to [SRS-18, "SRS Operation Check"](#) .
3. Check that the seat belt retractor, seat belt anchor and buckle bolts are securely attached.
4. Check the shoulder seat belt guide and shoulder belt height adjuster for front seats. Ensure guide swivels freely and that belt lays flat and does not bind in guide. Ensure height adjuster operates properly and holds securely.
5. Check retractor operation:
  - a. Fully extend the seat belt webbing and check for twists, tears or other damage.
  - b. Allow the seat belt to retract. Ensure that belt returns smoothly and completely into the retractor. If the seat belt does not return smoothly, wipe the inside of the loops with a clean paper cloth, because dirt built up in the loops of the upper anchors can cause the seat belts to retract slowly.
  - c. Fasten the seat belt. Check the seat belt returns smoothly and completely to the retractor. If the belt does not return smoothly, the cause may be an accumulation of dust or dirt. Use the "SEAT BELT TAPE SET" and perform the following steps.

Inspect the front seat belt through-anchor:

1. Pull the seat belt out to a length of 500 mm (19.69 in) or more.
2. Use a clip or other device to hold the seat belt at the center pillar belt opening.
3. Pass a thin wire through the through-anchor belt opening. Hold both ends of the wire and pull taut while moving it up and down several times along the belt opening surface to remove dirt.
4. Any dirt that cannot be removed with the wire can be removed by cleaning the opening with a clean cloth.
5. Apply tape at the point where the belt contacts the through-anchor belt opening.

### NOTE:

- Apply the tape so that there is no looseness or wrinkling.
6. Remove the clip holding the seat belt and check that the belt returns smoothly.
7. Repeat steps above as necessary to check the other seat belts.

# SEAT BELTS

---

## SEAT BELT RETRACTOR ON-VEHICLE CHECK

### Emergency Locking Retractors (ELR)

#### NOTE:

All seat belt retractors are of the Emergency Locking Retractors (ELR) type. In an emergency (sudden stop) the retractor will lock and prevent the belt from extending any further.

Check the seat belt retractors using the following test(s) to determine if a retractor assembly is operating properly.

#### ELR Function Stationary Check

Grasp the shoulder belt and pull forward quickly. The retractor should lock and prevent the belt from extending further.

#### ELR Function Moving Check

#### WARNING:

Perform the following test in a safe, open area clear of other vehicles and obstructions (for example, a large, empty parking lot). Road surface must be paved and dry. **DO NOT** perform the following test on wet or gravel roads or on public streets and highways. This could result in an accident and serious personal injury. The driver and passenger must be prepared to brace themselves in the event the retractor does not lock.


1. Fasten drivers seat belt. Buckle a passenger into the seat for the belt that is to be tested.
2. Proceed to the designated safe area.
3. Drive the vehicle at approximately 16 km/h (10 MPH). Notify any passengers of a pending sudden stop. The driver and passenger must be prepared to brace themselves in the event the retractor does not lock. Apply brakes firmly and make a very hard stop.

During stop, seat belts should lock and not be extended. If the seat belt retractor assembly does not lock, perform the retractor off-vehicle check.

## SEAT BELT RETRACTOR OFF-VEHICLE CHECK

1. Remove the seat belt retractor assembly.
2. Slowly pull out belt while tilting the retractor assembly forward from the mounted position without twisting the retractor assembly as shown in the illustration.

# SEAT BELTS

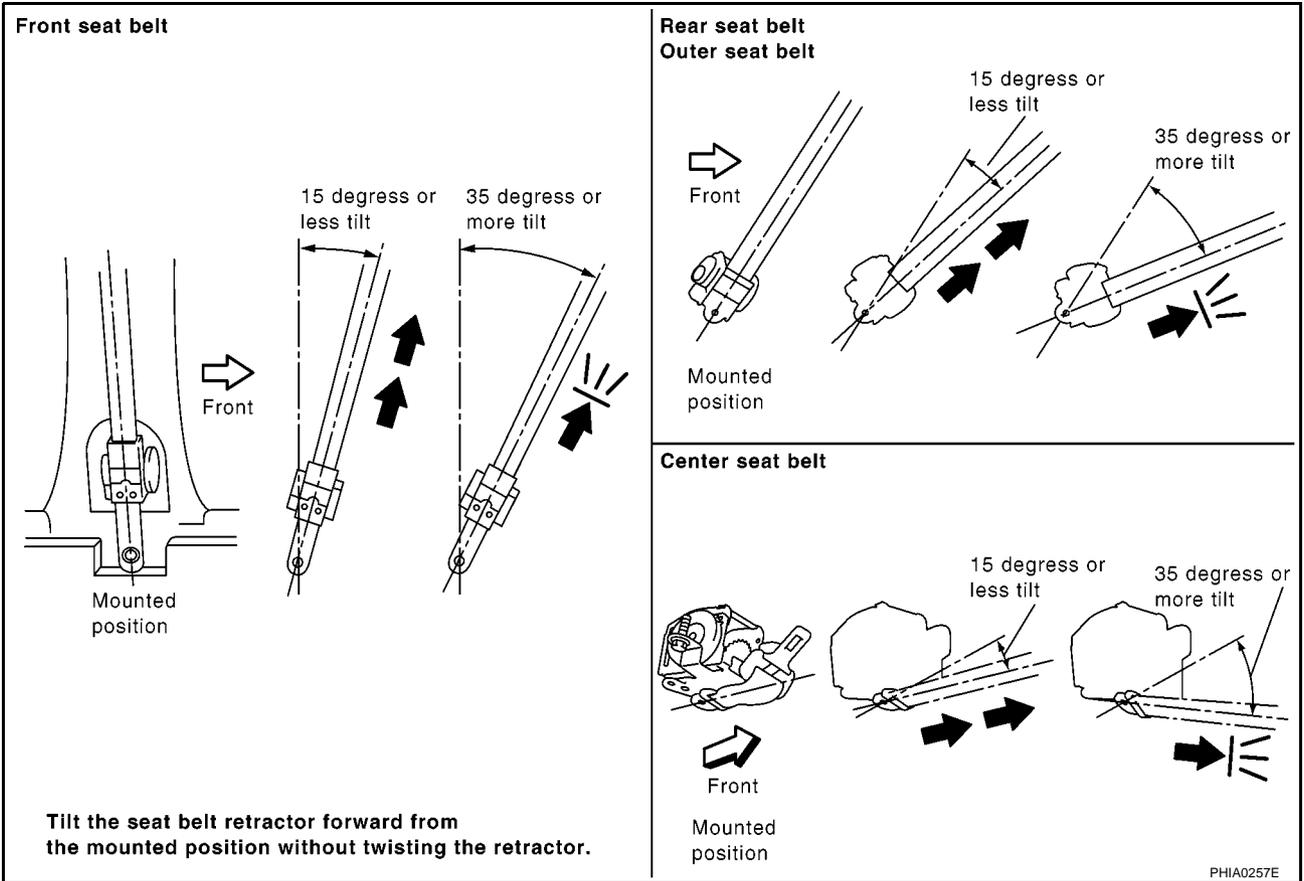

**15 degrees or less tilt** : Belt can be pulled out.

**35 degrees or more tilt** : Belt locks and cannot be pulled out.

If NG, replace the retractor assembly.

A  
B  
C  
D  
E  
F  
G  
SB  
I  
J  
K  
L  
M

# SEAT BELT WARNING SYSTEM

---

## SEAT BELT WARNING SYSTEM

PFP:25045

### Description

EHS0026E

- For seat belt warning lamps refer to [DI-28, "WARNING LAMPS"](#) .

# LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM

---

## LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM

PFP:75466

### Removal and Installation - Double Cab

EHS0026B

**NOTE:**

The LATCH (Lower Anchors and Tether for Children) system is not serviceable.

- A
- B
- C
- D
- E
- F
- G
- SB**
- I
- J
- K
- L
- M

# TOP TETHER STRAP CHILD RESTRAINT

---

## TOP TETHER STRAP CHILD RESTRAINT

PFP:88000

### Removal and Installation - Double Cab

EHS0026C

**NOTE:**

The Top Tether Strap Child Restraint system is not serviceable.